

IMPORTANT
PLEASE DO NOT RETURN TO STORE
 If You're Having Trouble, We're Here to Help!

Call us 24/7 at 1-855-292-4087
 Email us at support@alteclansing.com or visit us at alteclansing.com

REGISTER YOUR PRODUCT

To receive news, exclusive deals, OTA or firmware updates, warranty information and more please register your product at alteclansingsupport.com



ALTEC LANSING

Follow us on Facebook, Twitter, and Instagram.

12 Month Limited Warranty
 All Altec Lansing products come with 12 month limited warranty from the date of its original purchase.

24 Hour Customer Support
 We love our customers, and we care about your experience with Altec Lansing. If you need assistance, please call us at 1-855-292-4087 or e-mail support@alteclansing.com

www.alteclansing.com



In the Box

Wall Charger
 USB-C Charging Cable

IMW1400 HydraBoom Everythingproof™ Wireless Speaker

A Closer Look

Answer & End Call / Voice Assistant
 Color Changing Button
 Volume Up/Next Track
 Volume Down/Previous Track
 Link Button
 Power Button

USB Port
 Reset
 Charging Port

Charging

Red = Charging
 Green = Charging Complete

3-4 Hours Full Charge

Place a Qi Compatible device on the wireless charging pad to charge it.
 *Make sure your device is positioned correctly on your charging pad.
 *Make sure that there are no other objects on the charging pad.
 *Make sure to remove any phone covers before using the wireless charging.
 *When using Qi charging the volume in iOS will be automatically reduced to 50% to conserve battery.

Powering On/Bluetooth Pairing

PRESS & HOLD 1-2 SEC
 Pairing Mode
 Flashing Green = Ready to Pair

Paired
 Solid Green = Paired

Speaker Controls / Voice Assistant Shortcuts

PRESS
 + Volume Up
 - Volume Down
 Play/Pause
 Answer & End Call
 To activate Voice Assistant (Siri or Google Assistant)

PRESS & HOLD (2 sec)
 ON/OFF
 Next Track
 Previous Track
 Reject Incoming Call
 To activate Voice Assistant (Siri or Google Assistant)

Reset-Press & Hold
 Disconnect Bluetooth: Press and hold for five seconds and the speaker will beep.
 Reset All Connections: Press and hold for ten seconds and the speaker will power off.

True Wireless Pairing

Turn on the first speaker and connect it with a Bluetooth compatible device.

Turn on the second speaker and press the **QD** button on that speaker.

Press and hold the **QD** button for 2-3 seconds on the first speaker. The first speaker will now connect to the second so they both stay in sync. The Link Buttons will illuminate green.

To exit True Press & Hold the power button on the speaker.

There are two modes:
 Mode 1: True Press: both play stereo for parties etc.
 Mode 2: True Stereo: one plays left and the other right.
 Simply press the **QD** button to switch between the modes.

Horizontal & Vertical Listening

Horizontal Mode
 Vertical Mode

The speaker will automatically switch modes based on its position (horizontal or vertical).

Light Change Mode

Press

To toggle between the different light modes:

1. Multicolor slow transition
2. Single color pulse to music
3. Multi color pulse to music
4. Single color slow fade
5. Single color
6. Multicolor cycle changed
7. Multicolor fast changed
8. Multicolor slow fade
9. Four color rotation
10. Four color rotation with pulse to music
11. Four color rotation
12. Off

Press & Hold the **Q** button for 1-2 sec to change the Strobe light modes.
 off → Pulse to music → Blink → off

FOLLOW US ON
 #myalteclansing

Changes or modifications not expressly approved by the party responsible for compliance could void the warranty. Always use the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, per the requirements of the FCC. These limits are designed to provide protection against harmful interference in a residential installation. This equipment operates, uses and can cause radio frequency interference if not used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. Interference may be determined by turning the equipment off and on. The user is encouraged to try to determine if interference is caused by this equipment.

— Do not use or relocate the receiving antenna.
 — Do not use the antenna for transmitting and receiving.
 — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 — Consult the dealer or an experienced radio/TV technician for help.

Speaker International Inc.
 895 Center Drive
 Edison, New Jersey 08817, USA
 855-292-4087
www.alteclansing.com