



CLEANING GUIDE

The ICEBREAKER should be cleaned before first use.

Regular cleaning is needed to maintain good functionality. Cleaning helps prevent the formation of bacteria and limescale, which can cause ice cubes to stick inside the ICEBREAKER.


Descaling

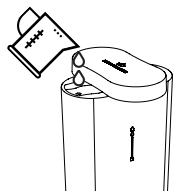


Move the marker to filling position  by turning the lid.


Fill with approx. 140 ml coffee machine descaler (follow the descaler/water ratio specified by the descaler product). Leave for 15 minutes, empty and clean.

Prepare for Cleaning

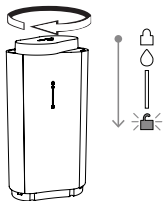


Move the marker to open position  by turning the lid.

Take off the lid, the bottom and the dispenser by pulling upwards and downwards, respectively.

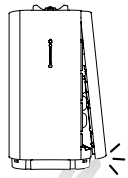


Take off the sides by placing your thumb on the release button (marked with an orange label inside the ICEBREAKER) and press outwards.

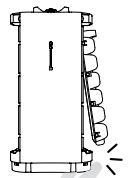


Take off the trays by placing your thumb at the bottom of the tray, from the inside, and push outwards. Then pull the tray out.

Cleaning

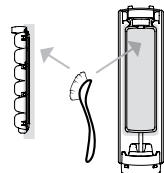



Clean the gaskets and the dismantled trays with a soft brush and soapy water (max 65°C / 149°F).

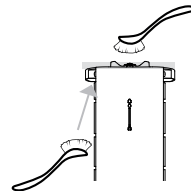


Clean the top and the bottom of the filling tub.
Rinse all the cleaned parts. Dry each part with a clean cloth and allow to air-dry.

Assembly

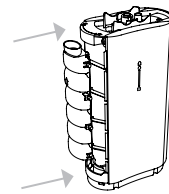

Make sure that the marker is placed in open position .

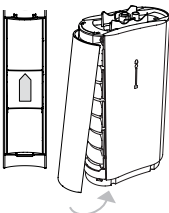


Insert the trays with the water hole pointing upwards and press until you hear a click.

Insert the sides with the orange arrow pointing upwards. Insert the top and then press the sides towards the main body until you hear a click.

Put on the dispenser, the bottom and the lid.

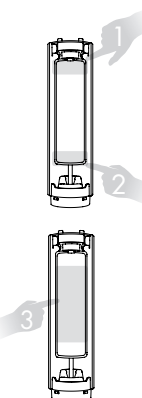

Clean Gaskets (if needed)



If dirt accumulates behind the two gaskets, take them off by carefully pulling outwards. Then clean the gaskets and the inside of the ICEBREAKER.

Mount the gaskets by placing them loosely on the white frames. Firmly press down the top and the bottom of the gaskets, and then the center. Lastly, press all around the gaskets so they are firmly sealed.

NEED TO KNOW

- If water drips from the bottom during or after filling, the orange marker may not be completely on .
- Gently pour water into the filling tub with a thin water stream to avoid overfilling.
- ICEBREAKER is completely filled when no more water drains from the filling tub. Tip: take off the sides to see when the ICEBREAKER is full.
- Before freezing, always ensure that the inside and the outside of ICEBREAKER does not contain excess water:
 - Take off bottom, lid and sides and shake thoroughly.
- Gently shake up/down if ice cubes are stuck inside and to check if the ICEBREAKER is empty.
- As ice cubes may stick to the inside, do not use the quick freeze function in the freezer and do not freeze colder than -20°C / -4°F.
- The sides must always be mounted when turning the lid.
- The ICEBREAKER can only be disassembled and assembled in open position .
- Clean and descale on a regular basis.
- Empty the ICEBREAKER completely before refilling.
- If the filling becomes slow, wipe off the inside of the trays with a clean tea towel or descale the ICEBREAKER.

LET'S HEAR FROM YOU

If you have any questions, good ideas or problems, please contact us. Find contact information at our website:

www.myicebreaker.com

Join us on   

Find videos, drink recipes, ice cube inspiration and so much more on www.myicebreaker.com or by scanning this QR Code:



FOOD CONTACT

The ICEBREAKER must only be filled with clean water.

ICEBREAKER is intended and safe for food contact according to ICEBREAKER Nordic's declaration of conformity.

For more information, go to our website: www.myicebreaker.com




DISCLAIMER

This product guide is designed to ensure that ICEBREAKER Urban (the product) is used correctly. This includes to ensure that the user and his/her belongings are not harmed by using the product.

ICEBREAKER Nordic advises against incorrect use of the product. Therefore, the product should only be used in accordance with the instructions in this product guide.

ICEBREAKER Nordic strongly recommends:

Closely follow the cleaning instruction in order to avoid bacteria formation. Only use the product when fully assembled and with clean water. Do not heat the product or any part of it. Do not place the product close to objects which are sensitive to liquids. Be aware that if you leave a frozen product outside the freezer, it may cause water damage upon a surface. Sharp tools must not come into contact with the product. This includes during assembly, disassembly, cleaning and ice cube release. If stored outside the freezer, always store the product in open position . To avoid product damage, the sides of the product must be mounted when turning the lid. During freezing, the outside and the inside mechanisms of the product must not contain excess water. Be aware of this every time you fill and clean your product. The product must not be left in the freezer for more than 3 months. Food contact temperature must be from -20°C to 20°C / -4°F to 68°F. The product should be operated in ambient temperature from -20°C to 35°C / -4°F to 95°F and must be stored at temperature not exceeding 50°C / 122°F.

To the fullest extent permitted by law, ICEBREAKER Nordic disclaims all responsibility for damage caused by incorrect use of the product.

The warranty becomes void if the product is used improperly or incorrectly.

The product is intended and safe for food contact according to ICEBREAKER Nordic's declaration of conformity at www.myicebreaker.com.


ICEBREAKER Nordic ApS
Slotspladsen 1B
9000 Aalborg
Danmark

QUICK GUIDE

EN

FILL


Prepare

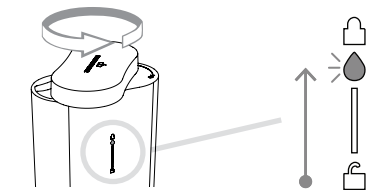

Remove




Fill

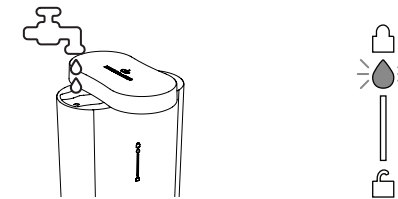


FREEZE


Close

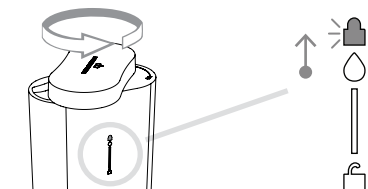

Shake

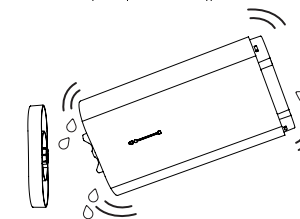

Freeze

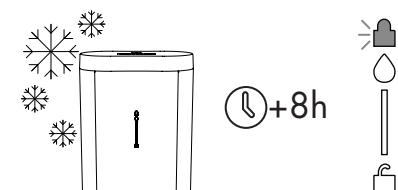

SERVE

Open

