



# LET'S HEAR FROM YOU

If you have any questions, good ideas or problems, please contact us. Find contact information at our website:

[www.myicebreaker.com](http://www.myicebreaker.com)

Join us on   

Find videos, drink recipes, ice cube inspiration and so much more on [www.myicebreaker.com](http://www.myicebreaker.com) or by scanning this QR Code:



# FOOD CONTACT

The ICEBREAKER must only be filled with clean water.

ICEBREAKER is intended and safe for food contact according to ICEBREAKER Nordic's declaration of conformity.

For more information, go to our website: [www.myicebreaker.com](http://www.myicebreaker.com)



# DISCLAIMER

This product guide is designed to ensure that ICEBREAKER Urban (the product) is used correctly. This includes to ensure that the user and his/her belongings are not harmed by using the product.

ICEBREAKER Nordic advises against incorrect use of the product. Therefore, the product should only be used in accordance with the instructions in this product guide.

ICEBREAKER Nordic strongly recommends:

Closely follow the cleaning instruction in order to avoid bacteria formation. Only use the product when fully assembled and with clean water. Do not heat the product or any part of it. Do not place the product close to objects which are sensitive to liquids. Be aware that if you leave a frozen product outside the freezer, it may cause water damage upon a surface. Sharp tools must not come into contact with the product. This includes during assembly, disassembly, cleaning and ice cube release. If stored outside the freezer, always store the product in open position . To avoid product damage, the sides of the product must be mounted when turning the lid. During freezing, the outside and the inside mechanisms of the product must not contain excess water. Be aware of this every time you fill and clean your product. The product must not be left in the freezer for more than 3 months. Food contact temperature must be from -20°C to 20°C / -4°F to 68°F. The product should be operated in ambient temperature from -20°C to 35°C / -4°F to 95°F and must be stored at temperature not exceeding 50°C / 122°F.

To the fullest extent permitted by law, ICEBREAKER Nordic disclaims all responsibility for damage caused by incorrect use of the product.

The warranty becomes void if the product is used improperly or incorrectly.

The product is intended and safe for food contact according to ICEBREAKER Nordic's declaration of conformity at [www.myicebreaker.com](http://www.myicebreaker.com).


ICEBREAKER Nordic ApS  
Slotspladsen 1B  
9000 Aalborg  
Danmark

# QUICK GUIDE

EN

## FILL


Prepare

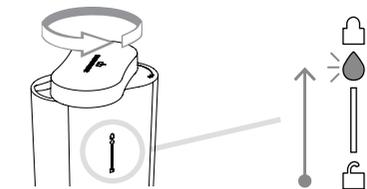

Remove




Fill

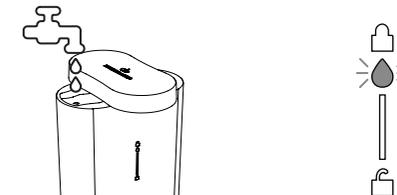


## FREEZE


Close

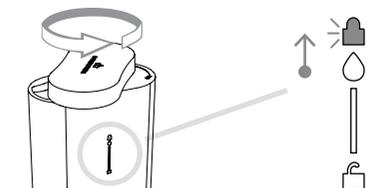

Shake

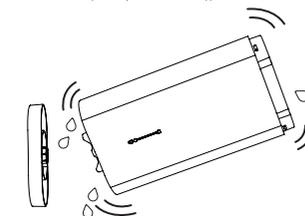

Freeze

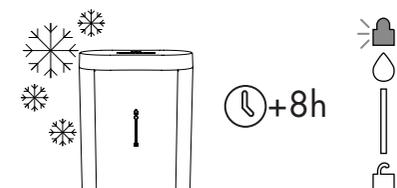

## SERVE

Open

